


## Fitting of Transponders

- Ensure that the transponder holder is fitted securely in a safe and secure position.
- The transponder must be mounted VERTICALLY and NOT horizontally with the securing pin at the top.

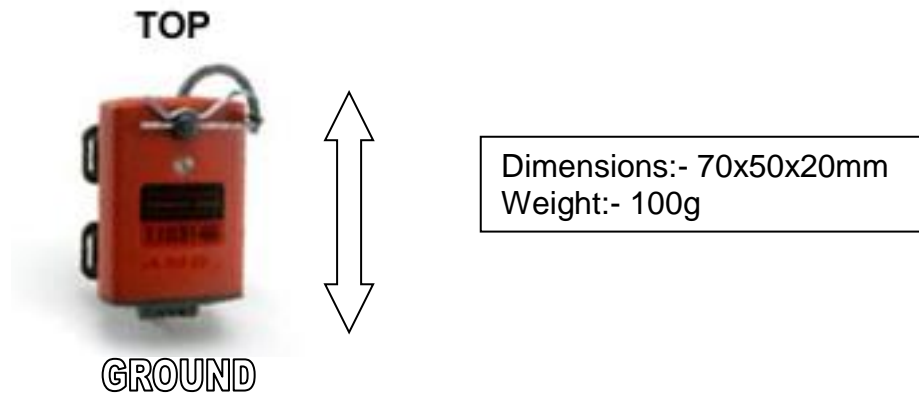

- Push the 'R' clip right through as far as possible in order to prevent it being accidentally pushed out.
- Mount the transponder so that it is preferably no more than 2ft (60cm) from the ground.
- Mount the transponder so that it is well away from any heat generating bodies such as the exhaust.
- Mount the transponder so that it is well away from the ignition and any electrics.
- Mount the transponder so that it has as clear a view of the ground as possible. Note - The transponder signal will not pass through metal or carbon fibre based plastics.
- The transponder must be fitted whenever your machine is on the track.
- Please make sure that the transponder is returned at the end of the meeting before you leave the circuit.
- Loss of, or damage to, the transponder will result in a charge of £300 + VAT being made for its replacement.

**Disregarding any of the above guidelines may result in your time(s) not being recorded.**

**No times will be recorded at all if the transponder is not fitted**